

INTRODUCTION

Thank you for choosing an HK Instruments RHT series relative humidity transmitter. The RHT series is intended for use in commercial environments in HVAC/R applications.

The RHT series measures relative humidity (rH) and temperature (T). Each measurement parameter (rH, T) has a separate field configurable output.

The RHT series relative humidity transmitters are available with Modbus configuration, relay and touchscreen display.

APPLICATIONS

RHT series devices are commonly used to monitor:

- humidity and temperature levels in offices, public spaces, hospitals, meeting rooms and classrooms
- humidity and temperature in various commercial applications
- humidity and temperature in HVAC/R environment

SPECIFICATIONS

Performance

Measurement ranges:

Temperature: 0...50 °C
Relative humidity: 0-100 %

Accuracy:

Temperature: <0.5 °C

Relative humidity:

±2...3 % at 0...50 °C and 10-90 % rH
Total error band includes accuracy, hysteresis and temperature effect over 5...50 °C and 10-90% rH.

Technical Specifications

Media compatibility:

Dry air or non-aggressive gases

Measuring units:

°C and % rH

Measuring element:

Temperature: Pt1000

Relative humidity:

Thermoset polymer capacitive sensing element

Environment:

Operating temperature: 0...50 °C
Storage temperature: -20...70 °C
Humidity: 0 to 95 % rH, non condensing

Physical

Dimensions:

Case: 99 x 90 x 32 mm

Weight:

150 g

Mounting:

3 screw holes slotted, 3.8 mm

Materials:

Case: ABS

Protection standard:

IP20

Display (Optional)

Touchscreen

Size: 77.4 x 52.4 mm

Electrical connections:

Power supply:

5-screw terminal block
(24 V, GND, rH, T, NC)
0.2-1.5 mm² (12-24 AWG)

Relay out:

3-screw terminal block
(NC, COM, NO)
0.2-1.5 mm² (12-24 AWG)

Electrical

Input:

24 VAC or VDC, ±10 %
Current consumption: max 90 mA (at 24 V) +
10 mA for each voltage output or 20 mA for
each current output

Temperature output signal:

0-10 V, R>1 kΩ
2-10V, R>1 kΩ
4-20 mA, R<500 Ω

Relative humidity output signal:

0-10 V, R>1 kΩ
2-10 V, R>1 kΩ
4-20 mA, R<500 Ω

Relay out:

SPDT Relay, 250 VAC / 30 VDC / 6 A
Adjustable switching point and hysteresis


Conformance

Meets requirements for CE marking:
EMC Directive 2014/30/EU
RoHS Directive 2011/65/EU
LVD Directive 2014/35/EU
WEEE Directive 2012/19/EU


COMPANY WITH
MANAGEMENT SYSTEM
CERTIFIED BY DNV GL
= ISO 9001 = ISO 14001 =



SCHEMATICS

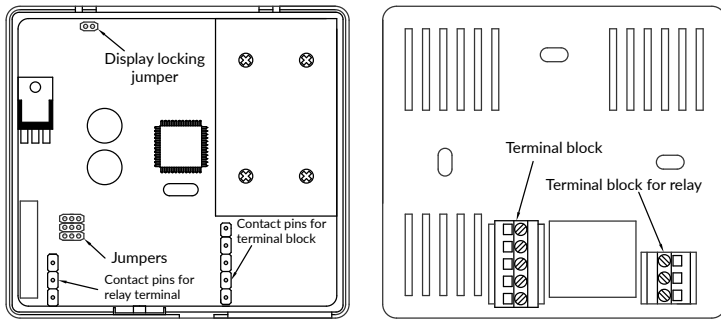

DIMENSIONAL DRAWINGS

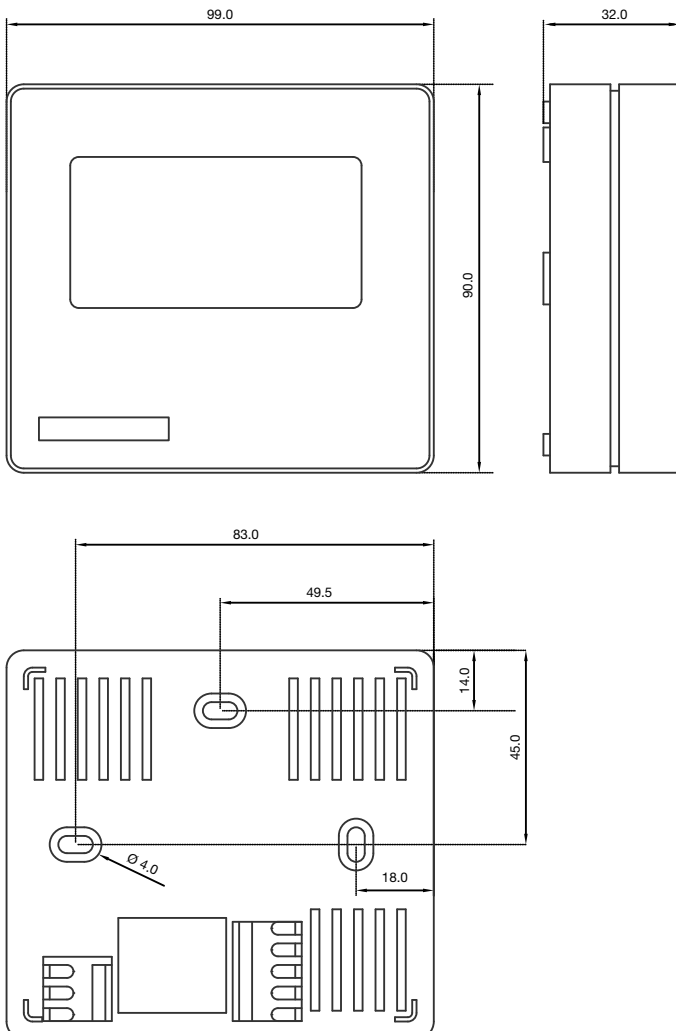

INSTALLATION

- 1) Mount the device in the desired location (see step 1).
- 2) Route the cables and connect the wires (see step 2).
- 3) The device is now ready for configuration.

WARNING! Apply power only after the device is properly wired.

STEP 1: MOUNTING THE DEVICE

- 1) Select a mounting location on the wall at 1.2–1.8 m (4–6 ft) above the floor and at least 50 cm (20 in) from the adjacent wall. Do not block device air vents from any direction and leave at least 20 cm (8 in) gap to other devices. Locate the unit in an area with good ventilation and an average temperature, where it will be responsive to changes to the room conditions. The RHT should be mounted on a flat surface.

Do not locate the RHT where it can be affected by:

- Direct sunlight
- Drafts or dead areas behind doors
- Radiant heat from appliances
- Concealed pipes or chimneys
- Outside walls or unheated / uncooled areas

- 2) Use the device as a template and mark the screw holes.

- 3) Mount the wall plate with screws.

- Incorrect installation may cause a shift in temperature output

Figure 1a - Surface mounting


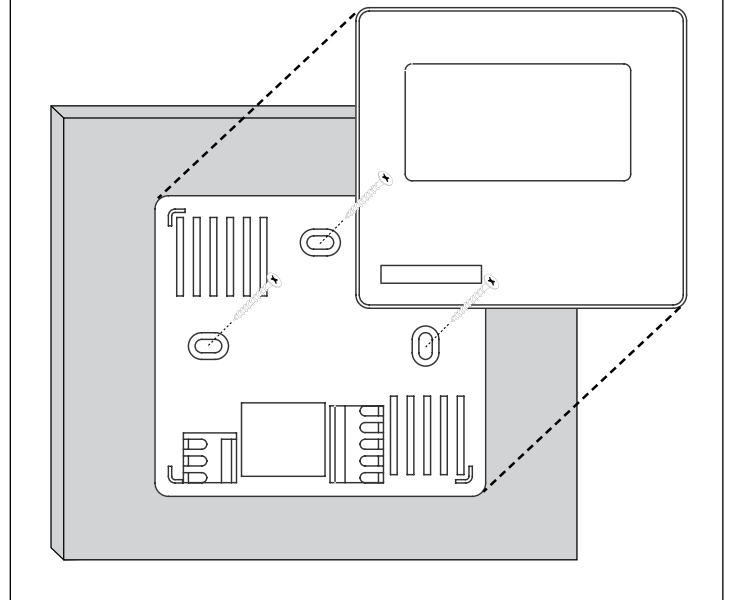


Figure 1b - Surface mounting

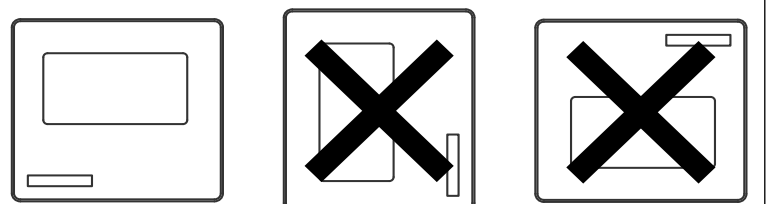

YES

NO

NO


STEP 2: WIRING DIAGRAMS

CAUTION!


- For CE compliance, a properly grounded shielding cable is required.
- Use copper wire only. Insulate or wire nut all unused leads.
- Supply a separate cable for relay and signal out when using line voltage to power the relay.
- Any wiring may carry the full operating line voltage current based on field installation. The cover locking screw must be installed if the line voltage is supplied to the relay.
- Care should be used to avoid electrostatic discharge to the device.
- This unit has configuration jumpers. You may need to reconfigure this device for your application.

- 1) Route the cables through the square opening in the back plate or for surface wiring select a knockout on the top or bottom of the wall plate, as shown in Figure 2a.
- 2) Connect the wires as shown in Figure 2b and 2c.


Figure 2a - Routing the cables

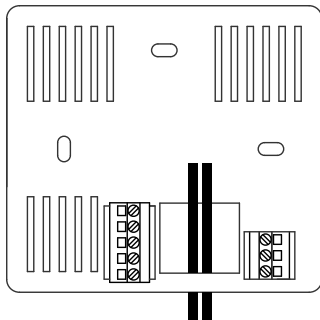

Wires can be routed through the square opening in the back plate

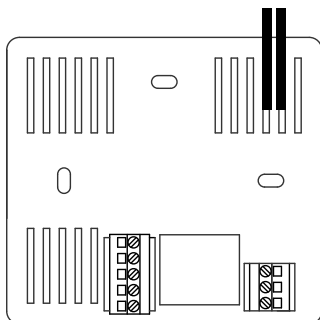

Wires can be routed through the top knockouts

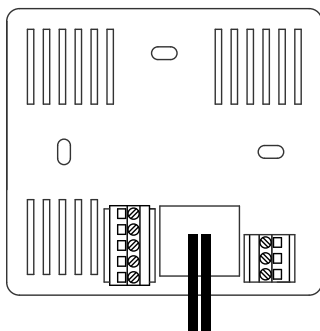

Wires can be routed through the bottom knockouts

WIRING DIAGRAMS CONTINUED

Figure 2b - Wiring diagram: Power input & signal output


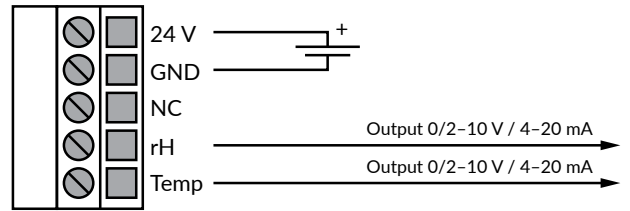


Figure 2c - Wiring diagram: Relay

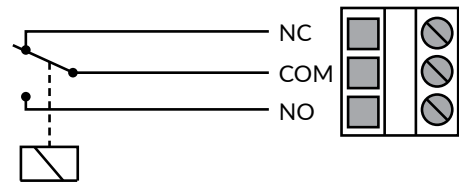


STEP 3: CONFIGURATION

Configuration of the RHT series device consists of:

- 1) Configuring the jumpers (see step 4).
- 2) Configuration menu options.

(Display versions only. See the user manual for further details.)

Figure 3 - Jumper installation

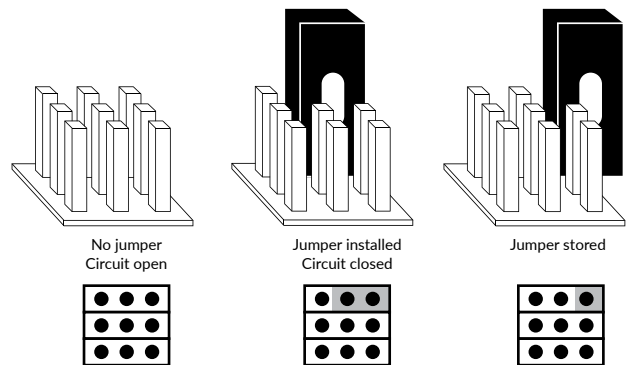

(Grey colour indicates that a jumper is installed)

STEP 4: SELECTING THE OUTPUT MODE


1) Configuration of the output modes of:

- Relative humidity (rH)
- Temperature (Temp)

Select the output mode, current (4–20 mA) or voltage (0–10 V), by installing jumpers as shown in Figure 4. Both outputs, relative humidity, and temperature are configured separately. To select 2–10 V output mode on a display version device: First, select 0–10 V output by jumper(s), then change the voltage (V) output from 0–10 V to 2–10 V via the configuration menu. Please see the user manual for more details.


Figure 4

 Jumper installed to the left side pins:
0–10 V output selected




0–10 V 4–20 mA

 Jumper installed to the right side pins:
4–20 mA output selected



0–10 V 4–20 mA

 Second jumper installed to the right side pins:
4–20 mA output selected for rH
Third jumper installed to the left side pins
0–10 V output selected for temperature



0–10 V 4–20 mA

2) Locking the display:

Install the jumper to lock the display to prevent access to the configuration menu after installation is completed (see the schematics for the location of the pins).

RECYCLING/DISPOSAL

The parts left over from installation should be recycled according to your local instructions. Decommissioned devices should be taken to a recycling site that specializes in electronic waste.



WARRANTY POLICY

The seller is obligated to provide a warranty of five years for the delivered goods regarding material and manufacturing. The warranty period is considered to start on the delivery date of the product. If a defect in raw materials or a production flaw is found, the seller is obligated, when the product is sent to the seller without delay or before expiration of the warranty, to amend the mistake at his/her discretion either by repairing the defective product or by delivering free of charge to the buyer a new flawless product and sending it to the buyer. Delivery costs for the repair under warranty will be paid by the buyer and the return costs by the seller. The warranty does not comprise damages caused by accident, lightning, flood or other natural phenomenon, normal wear and tear, improper or careless handling, abnormal use, overloading, improper storage, incorrect care or reconstruction, or changes and installation work not done by the seller or his/her authorized representative. The selection of materials for devices prone to corrosion is the buyer's responsibility, unless otherwise is legally agreed upon. Should the manufacturer alter the structure of the device, the seller is not obligated to make comparable changes to devices already purchased. Appealing for warranty requires that the buyer has correctly fulfilled his/her duties arisen from the delivery and stated in the contract. The seller will give a new warranty for goods that have been replaced or repaired within the warranty, however only to the expiration of the original product's warranty time. The warranty includes the repair of a defective part or device, or if needed, a new part or device, but not installation or exchange costs. Under no circumstance is the seller liable for damages compensation for indirect damage.